

MANUAL TILE CUTTERS

JUMBO

OPERATING MANUAL



daltile®

daltool

TABLE OF CONTENTS

1. SPECIFICATIONS & ACCESSORIES

Specifications & Accessories	3
------------------------------------	---

2. OPERATING INSTRUCTIONS

Setting up your dry cutter	4
Cutting Procedures	4
Repetitive Cuts.....	5
Cutting Larger Tiles	5


3. MAINTENANCE AND TROUBLESHOOTING

General Maintenance	6
Re-Aligning the Ruler	6

5. SPARE PARTS

Spare Parts	7
-------------------	---

SPECIFICATIONS & ACCESSORIES

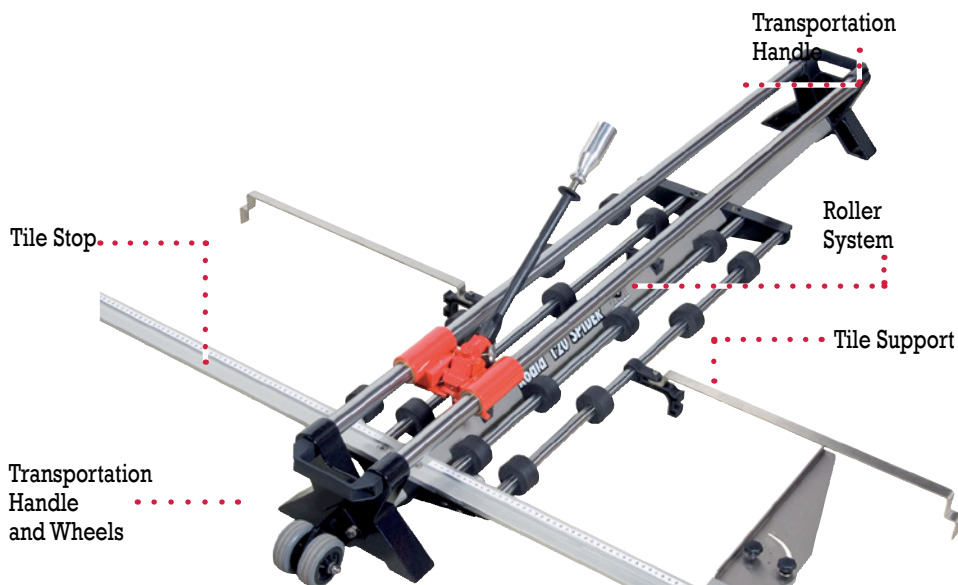

		JUMBO™ 28	JUMBO™ 35	JUMBO™ 50
Cutting Length:	[Inch]	28	35	50
Max. Tile Size Diagonal Cuts	[Inch]	20	25	36
Cutting Height max.:	[Inch]	7/8	7/8	7/8
Breaking Power:	[lbs]	4,400	4,400	4,400
Dimensions:	[Inch]	45 1/4 x 12 1/2 x 7	53 3/8 x 12 1/2 x 7	66 3/8 x 12 1/2 x 7
Weight:	[lbs]	46	51	61
Part Nr.:		9999 546426	9999 546427	9999 546428

Scoring Wheels



9999 539523	Scoring Wheel PREMIUM 1/2"	Ø 6 mm
9999 539524	Scoring Wheel PREMIUM 3/8"	Ø10 mm
9999 539525	Scoring Wheel PREMIUM 3/4"	Ø18 mm
9999 543469	Scoring Wheel TITANIUM 3/8"	Ø10 mm
9999 543470	Scoring Wheel TITANIUM 3/4"	Ø18 mm

OPERATING INSTRUCTIONS



Setting up your Dry Cutter: Place the Tile Cutter on a level surface. Mount the scoring wheel and secure with the knurled knob (1). Swivel the 2 Tile Supports out (2). Next, swivel the 2 Tile Stops out (3) and secure them in 90° position with the locking device (4). Do not use damaged or worn out scoring wheels, this will decrease the quality of the cut or result in breakage of the tile.



Cutting Procedures: Place the tile onto the tile cutter at the desired position and angle (5). Position the scoring wheel at the beginning of the tile and move the scoring wheel over the tile in one smooth movement (6). When cutting very rough tiles it may be necessary to repeat the scoring movement until a continuous groove is made.

OPERATING INSTRUCTIONS



Cutting Procedures Cont'd: Move the cutter into the breaking position by pulling the slide tube on the lever **(7)**. Put the breaker at the end of the tile near the end stop. Move the lever down and apply sufficient force to break the tile **(8)**.



Repetitive Cuts: The DalTool® Dry cutters are supplied with an adjustable tile stop that allows for repetitive cuts up to 45° **(9)(10)**. Simply secure the Cutting Guide at the desired dimension and angle to cut identical tiles.

Cutting larger tiles: In order to avoid breakage of larger tiles, the DalTool® dry cutters are supplied with two tile supports. Rotate and swivel the product supports out for optimal tile support

RE-ALIGNMENT OF THE RULER




General Maintenance: DalTool® Dry Cutters are designed for minimum maintenance and durability. For the longevity of your DalTool® Dry Cutter and continued smooth cutting movement simply keep the guiding bars dry and clean from cutting debris. Store the Dry Cutter clean and dry in the original carrying case.

Re-aligning the 90° cutting angle.

To re-align the ruler at the 90° cutting angle:

- loosen the blocking device
- Adjust the ruler at 90° with the cutting line
- Push the blocking-device against the ruler and tighten both screws

SPARE PARTS

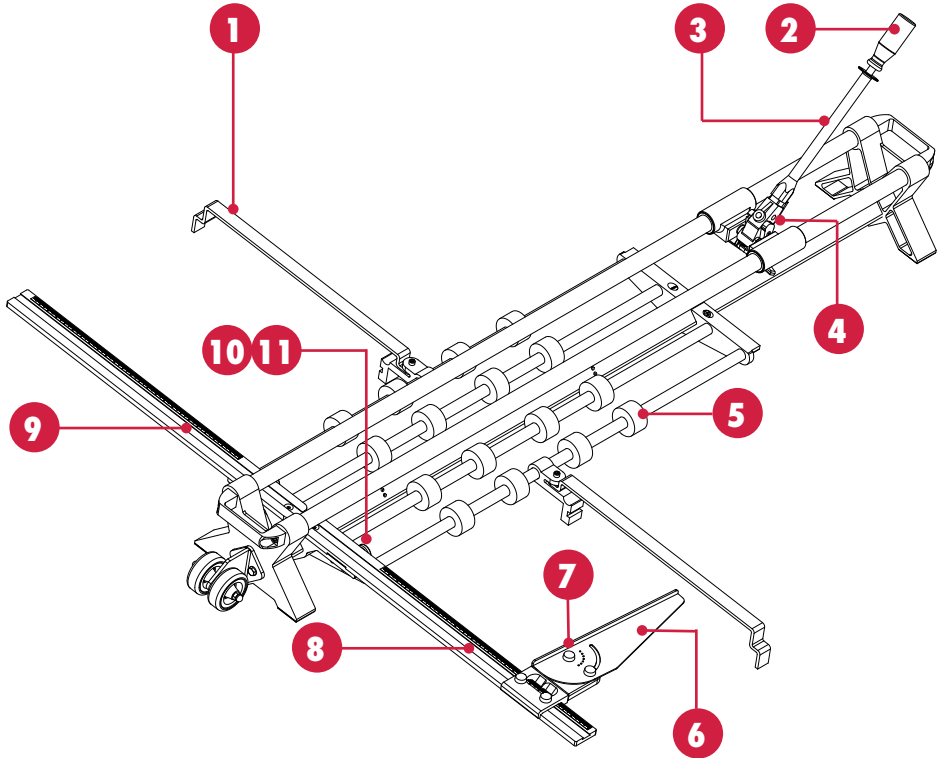

Pos.	Part Nr.	Description
1.	40.75.003	Tile Support
2.	40.75.004	Grip + Threaded Rod
3.	40.50.135	Lever
4.	40.75.005	Spring
5.	65.06.013	Roller Set (4 Pcs.)
6.	40.75.006	Tile Stop
7.	65.09.078	Knurled Knob Set (4Pcs.)
8.	40.75.014	Ruler Left JUMBO 75
	40.75.015	Ruler Left JUMBO 90
	40.75.016	Ruler Left JUMBO 120
9.	40.75.017	Ruler Right JUMBO 75
	40.75.018	Ruler Right JUMBO 90
	40.75.019	Ruler Right JUMBO 120
10.	40.75.013	Locking Device
11.	60.05.793	Knurled Knob

www.daltool.com



daltille®

daltool